

Custom HTTPS certificates (EG4xxx only)

Starting in firmware v4.2 a custom HTTPS certificate may be uploaded to the meter and used for local HTTPS webserver access. This does not affect the proxy-server access (e.g., <https://eGauge9999.d.egaug.net> , <https://eGauge9999.egaug.es> or <https://egaug9999.egaug.io>).

eGauge Systems cannot provide certificate files or assist with certificate generation.


Only EG4xxx model meters may be used with custom HTTP certificates.

Never share your private key or certificate file. The private key is like a password and must never be shared.


The certificate must be a single file containing the private key and full chain and certificate in PEM format. See below for an example of how this file should look.

Installing the Certificate


From the main eGauge interface, navigate to View -> Mobile Friendly:

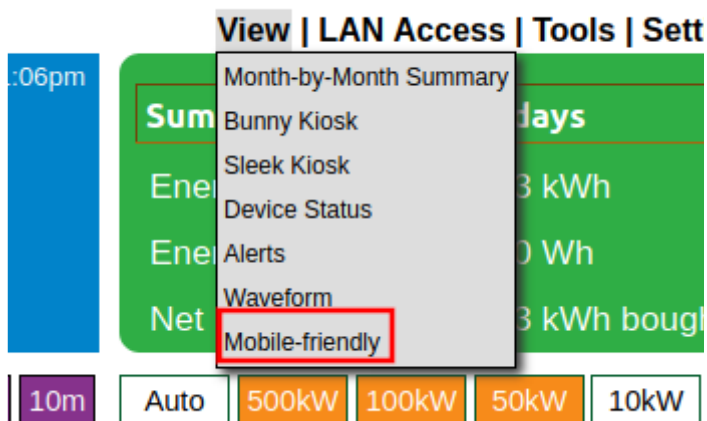


Click the hamburger menu in the upper left-hand corner and navigate to Setup -> Network -> Web-server:

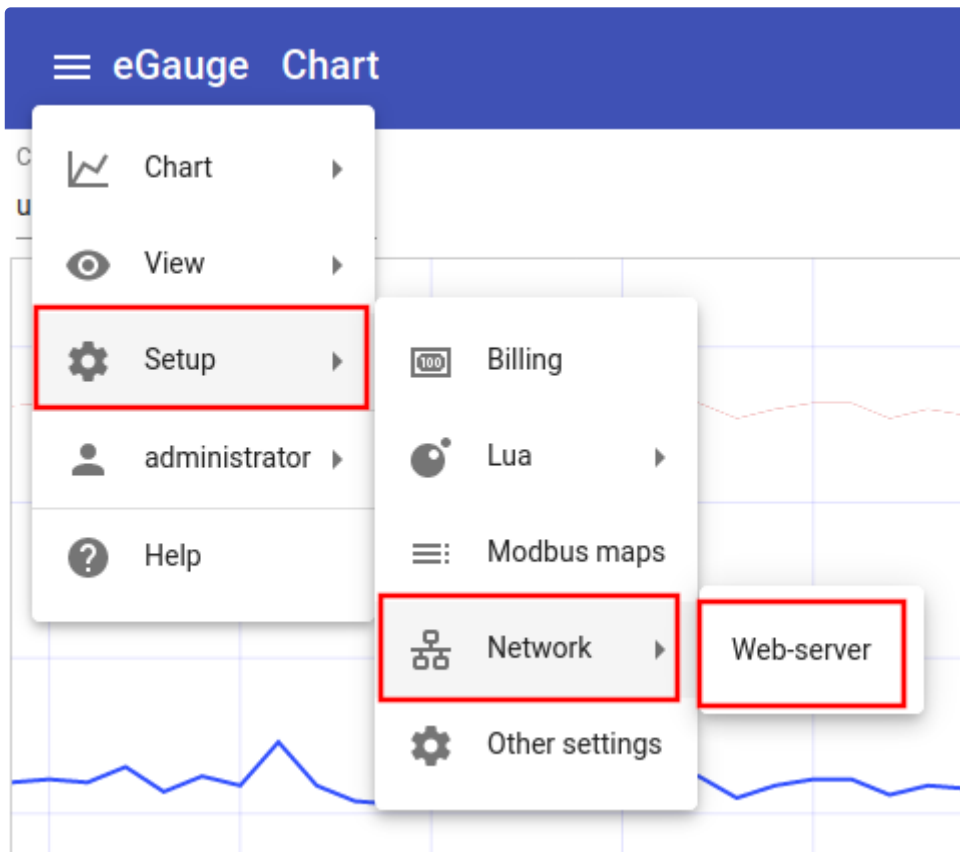


Click the "Upload" button:

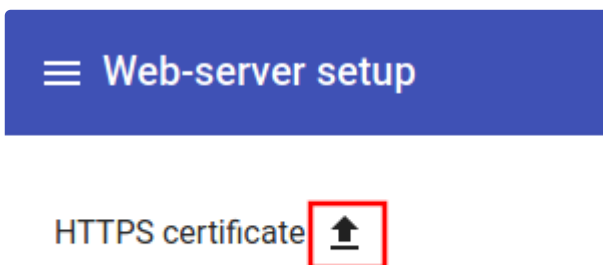


Click where it says "Filename" and choose the certificate file to upload. This must contain the private key and full chain in the same .pem file.

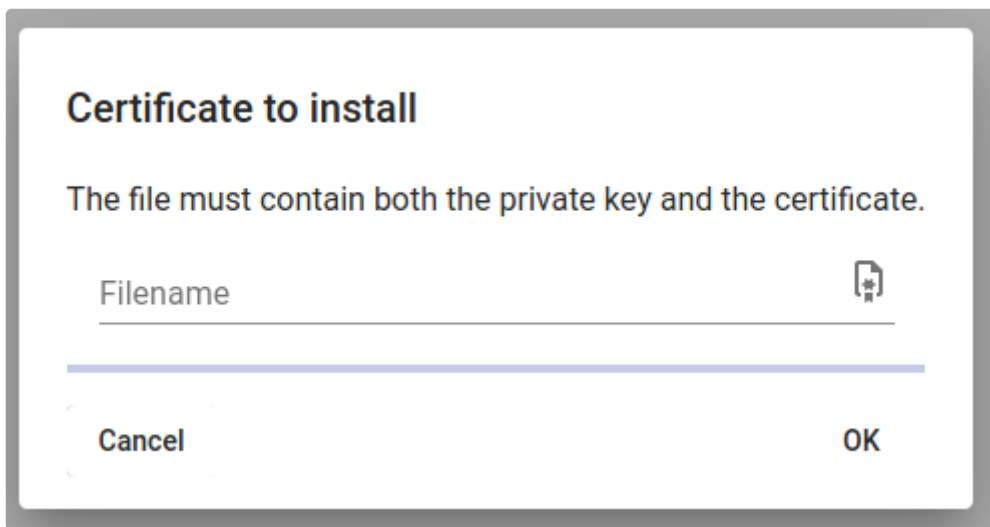

If successful, you will be redirected back to the main page and see a confirmation at the bottom of the page the certificate was updated:

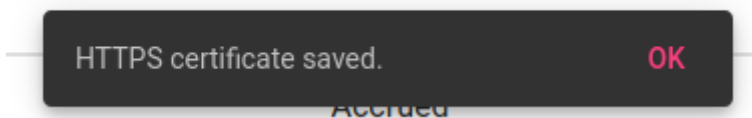

If there is a problem with the certificate file uploaded, you will receive an error message at the bottom of the screen:



If there is a failure, check the certificate file format is correct and not corrupt.

Certificate file format

The certificate file must be in .pem format and contain the private key and full chain. It should have a single `BEGIN PRIVATE KEY` stanza, and one or more `BEGIN CERTIFICATE` stanzas. For example, a certificate may look similar to this (note: this example uses random data; it will not function as a certificate).

```
-----BEGIN PRIVATE KEY-----
UQgbr5+pL42go05/VKtq3F24IdC5XPVJ2/X3L5cn7cvyZFCiQ58tk
4YYLwmm4b035/rg65e6YuyEDo+zxCOikMPaSeluBWtLBKQUZw3bTyc
GtQ4FipRXBcFySDdEFuM1YuS7e8M9/h3mt5dIrljrRA/Pa9x6gzkWz
4Ow9xbm0JgPGkfajVX5vbauIr0UAc72MNg+IO8uuA2jH+f1fdpe4Rg
```

```

YhWKwuum4ZOjh+t5b4PgPmkSGJDR0W7w1Y55TXlxXEm=
-----END PRIVATE KEY-----
-----BEGIN CERTIFICATE-----
0QUubtUgnDnougS2OqNgoeNkeE2fGEJlnSTA4hfk6AyqSWU5qS7qgF
yVcC/ixa1lyjtrXoASENP5r3tQALpiFr/+PFnHS/+g2Ja7DQqYRByO
M1Za4oiLqpphyEMAB7CdXK4Etla8JbWj60XX2DLxwys9TxZR6UrsKI
ghZORWld89MaKlz5Xy1ymPy2Iz7GUASdchtWZyeOz+w+5dZvGUQ/O6
MGsIAqXO/t6UUsxfSLzyCwUlahL7FQ3Pa3XPcwPEaoaBt/II4CEzCw
DqZki2STUjCVHO/RR3vuswECIHxSyR+Pq8xnuzdnD2vSEumL7QQwf1
DnsW7IKMGkMMfDm2
-----END CERTIFICATE-----
-----BEGIN CERTIFICATE-----
UfWOH8729kTbI5GRr5N13R0Coqys4IXtboil5o97XYLt/S5I/r49WY
3dnIKlaI LurkzptNuY2PywIClib9Zkvu3ZukFusvMV2cick7NLTmim
rBOYeFGL/j7IO+jpLVLySLL9ER2tIUS+Ejpl+P5qhJkudQrMDTniQm
FWcAtaD7vQ2LTYIWojj/p5Xgfb/t7SwwGF7TS4Mq+2zRzVwcx9wm7N
ddp7zK9hWm/uw+hMG8moVAk6k+g5/LN8HmoDQDWR09WB4PPcjCLbmn
4Hy2Q8vJYRS3wBjUdy1CXZcmMS2RJLwAo6V8r4eEn5Krudbqm/hsUr
QHBRbftX/rvUGRhI
-----END CERTIFICATE-----

```

Creating certificate file example

Most certificate services provide separate certificate and key files and the private key needs to be concatenated with the certificate. For example, Lets Encrypt as of this writing provides several files: `cert.pem`, `chain.pem`, `fullchain.pem`, `privkey.pem`, and `README`. The example below show obtaining a Lets Encrypt certificate and creating the pem file to upload to eGauge. The file `egauge-cert.pem` will contain the contents of `privkey.pem` followed by `fullchain.pem` and can be uploaded to the eGauge meter.

```

root@localhost:~# certbot certonly -q \
    --dns-cloudflare \
    --dns-cloudflare-credentials ~/.secrets/cloudflare.ini \
    -d meter-name.example.com

root@localhost:~# cd /etc/letsencrypt/live/meter-name.example.com

root@localhost:/etc/letsencrypt/live/meter-name.example.com# ls
cert.pem chain.pem fullchain.pem privkey.pem README

root@localhost:/etc/letsencrypt/live/meter-name.example.com# cat privkey.pem fullchain.pem > egauge-

```

cert.pem

Please visit kb.egauge.net for the most up-to-date documentation.